
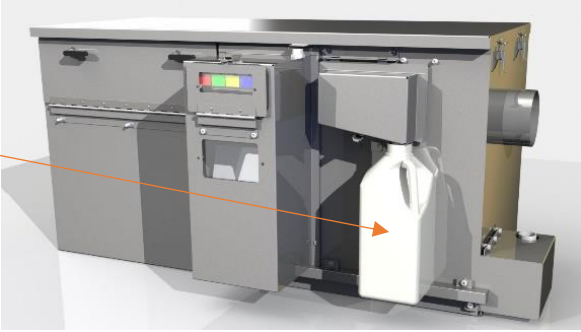
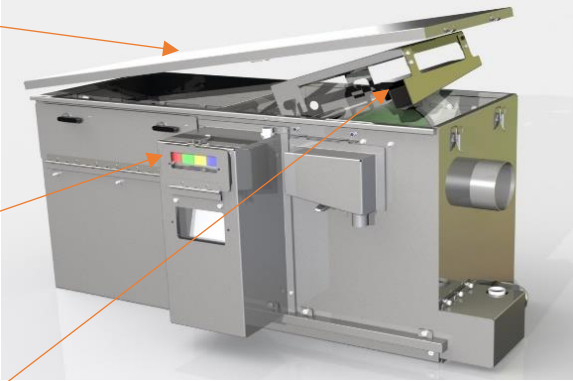


GREASE BOSS DAILY MAINTENANCE

WARNING: UNIT IS 240 V - Turn power supply off before removing and reinstalling wiper or roller

To avoid blockages and odour in the Mactrap Grease Removal Unit and filter basket – follow these daily maintenance steps

For more information see our maintenance video on www.mactrap.co.nz (in the section Underbench Grease Removal Units)

<p>Open the filter door</p> <p>Remove filter basket and empty solids to waste disposal</p> <p>Secure door</p>	
<p>Remove waste fat, oil and grease collection container (old milk bottles are ideal to use) and put in the rubbish bin.</p> <p>Place new container in position</p>	
<p>Lift the lid and check the blade for built up fat and grease.</p> <p>Important: When replacing the lid make sure the tab on the lid is over the sensor. The machine will not work if the tab and the sensor are not touching.</p> <p>After replacing the lid press the red button once to reset the machine. Once reset the light will change from continuous red to blinking red. The blinking light means it is working.</p> <p>Carefully wipe excess build-up of fat, oil and grease off wiper and replace in unit</p>	

Note: Do not clean roller with detergent as this will affect the operation of the grease trap